



Notice: This model changes its wire scheme depending on where you retrieve the wires. Be careful by checking the wires with a multi-meter for ground and +12v while in different modes to be sure, before installing.

See Ground Distribution, Diagram 14-3.

See Ground Distribution, Diagram 14-3.

**HOT SIDE SWITCHING**

WIPERS RUN WHEN 12V APPLIED TO WIPER MOTOR SLOW OR FAST TERMINALS. MOTOR COMMON AT GROUND.

**Rain Tracker™  
VEHICLE INTERFACE  
WIRING DIAGRAM**

© 2004 OPTO-ELECTRONIC DESIGN, INC